2006-08 ACCESSORIES AND EQUIPMENT

Ignition Switch - Civic

TEST

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) in the SRS before doing repairs or service.

1. Make sure you have the anti-theft code for the audio or the navigation system, then write down the audio presets. Make sure the ignition switch is OFF.
2. Disconnect the negative battery cable.
3. Remove the driver's dashboard lower cover (see **DRIVER'S DASHBOARD LOWER COVER REMOVAL/INSTALLATION**), and the steering column covers (see **COLUMN COVER REMOVAL AND INSTALLATION**).
4. Disconnect the 7P connector (A) from the ignition switch (B).

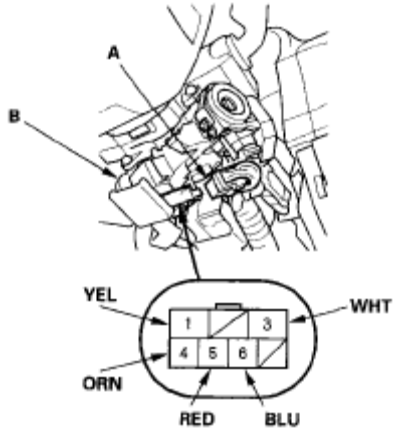

Fig. 1: Identifying Ignition Switch And 7P Connector

5. Check for continuity between the terminals in each switch position according to the table.

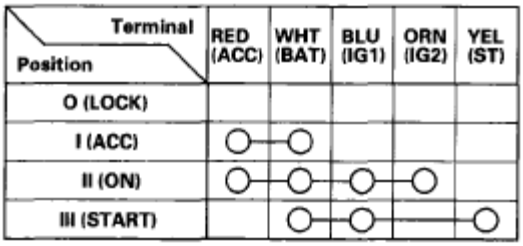

Fig. 2: Continuity Reference Chart

6. If the continuity checks do not agree with the table, replace the ignition switch (see **REPLACEMENT**).
7. After reconnecting the battery, enter the anti-theft code for the audio or the navigation system, then enter the customer's audio presets, and set the clock.

REPLACEMENT

SRS components are located in this area. Review the SRS component locations (see **COMPONENT LOCATION INDEX**) and the precautions and procedures (see **PRECAUTIONS AND PROCEDURES**) in the SRS before doing repairs or service.

1. Make sure you have the anti-theft code for the audio or the navigation system, then write down the audio presets. Make sure the ignition switch is OFF.
2. Disconnect the negative battery cable.
3. Remove the driver's dashboard lower cover (see **DRIVER'S DASHBOARD LOWER COVER REMOVAL/INSTALLATION**), and the steering column covers (see **COLUMN COVER REMOVAL AND INSTALLATION**).
4. Disconnect the 7P connector (A) from the ignition switch (B).

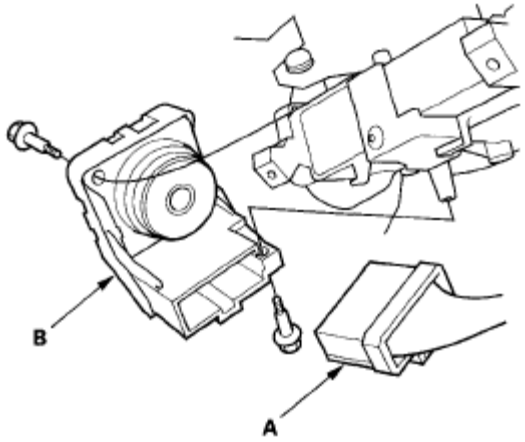

Fig. 3: Identifying 7P Connector And Ignition Switch

5. Remove the two screws and the ignition switch.
6. Install in the reverse order of removal.
7. After reconnecting the battery, enter the anti-theft code for the audio or the navigation system, then enter the customer's audio presets, and set the clock.